


Brownsville <-> Port Manatee Highway

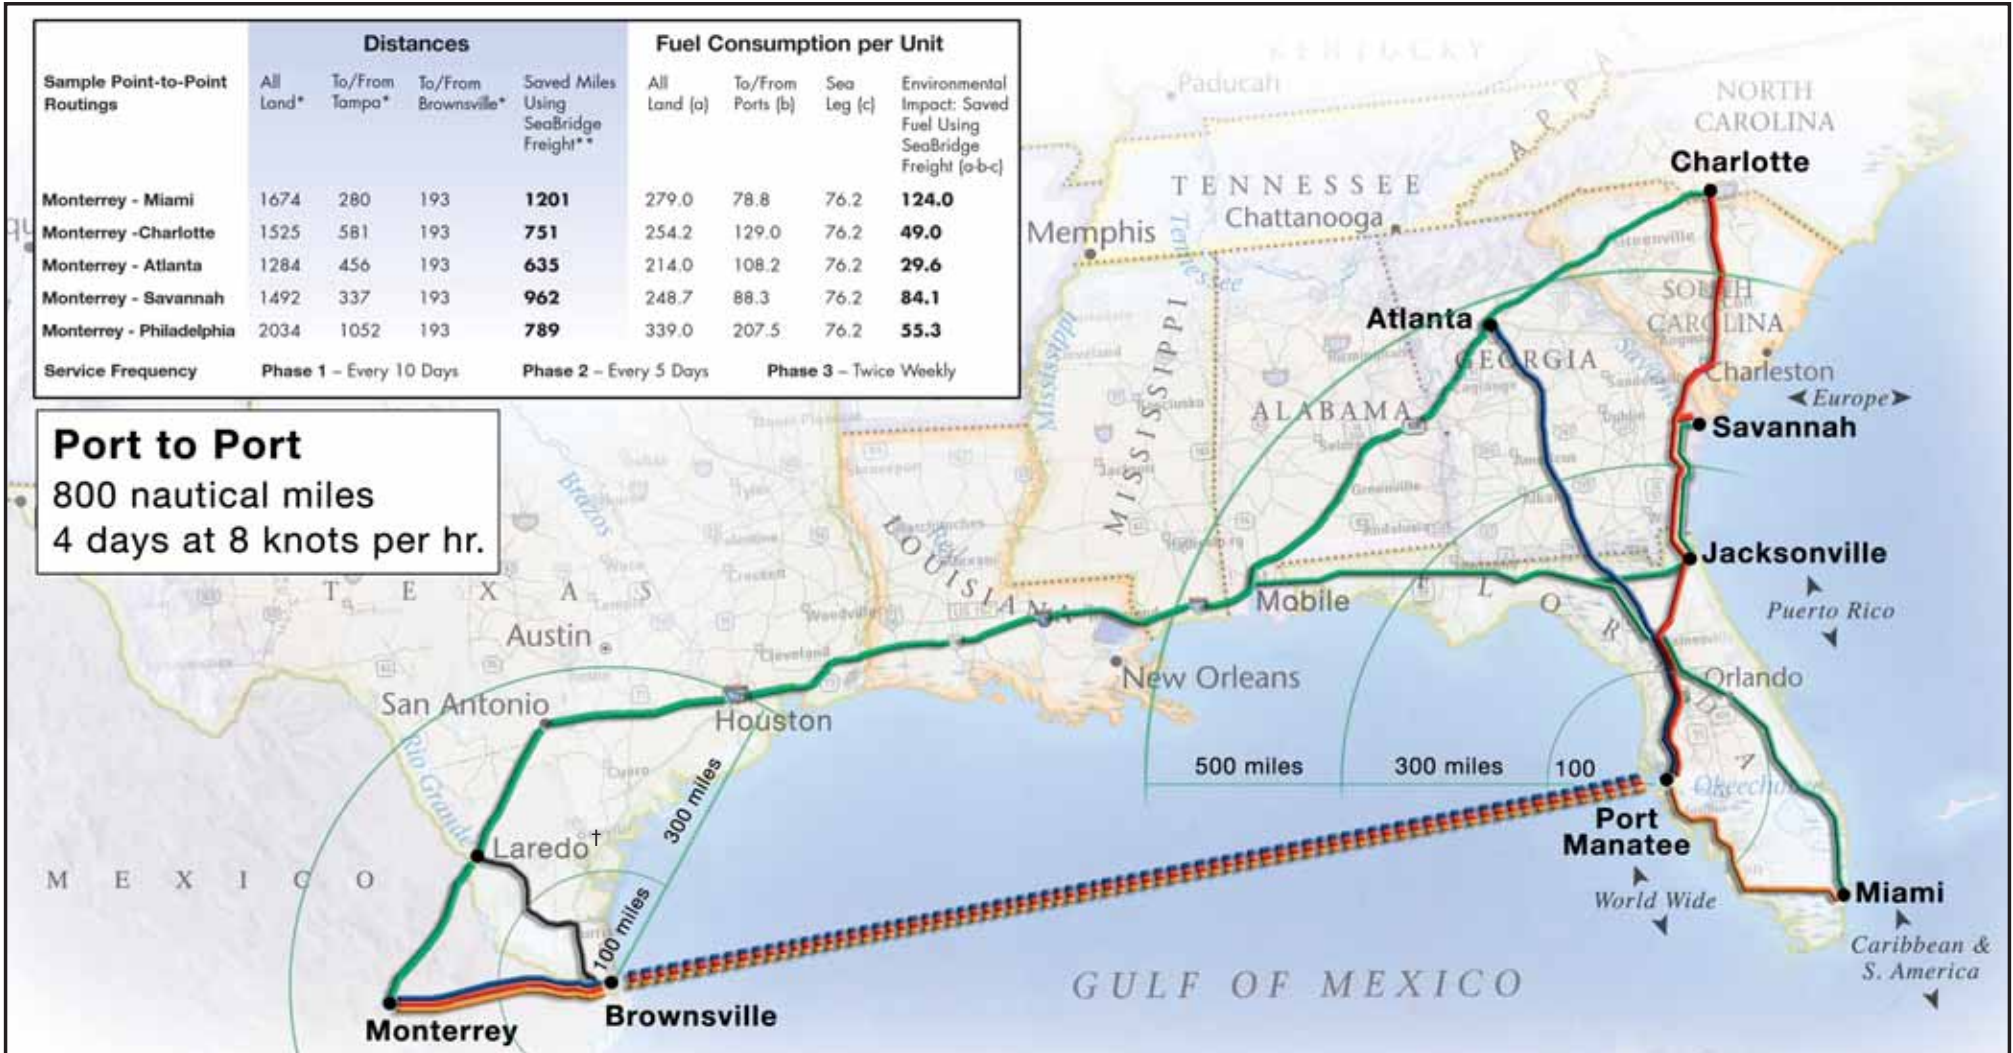

* Land distances and routings based on PC Miler. ** Saved Miles represent the distance the truck DOES NOT need to drive if it uses SeaBridge Freight.

† When a border crossing at laredo is required, Brownsville can be reached in 3 to 4 hours on average. (a) (b) Do not include idling

Hank Hoffman

President & CEO

hhoffman@seabridgefreight.com

Grant Castle

V.P., Sales & Marketing

gcastle@seabridgefreight.com

William Lauderdale

V.P., Marine Operations

blauderdale@seabridgefreight.com

SEABRIDGE
 FREIGHT

www.seabridgefreight.com